LITTLE BLASTER[™]

LARRY HESS AND ASSOCIATES, INC. BLAST-IT-ALL® P.O. BOX 1615 SALISBURY, NC 28145 WWW.BLAST-IT-ALL.COM

LITTLE BLASTER TM

LBT-3 WITH 300 CFM RECLAIM

MANUAL NUMBER: 506

TABLE OF CONTENTS

PAGE	FIGURE	
1	_	SET-UP INSTRUCTIONS
1	_	OPERATING INSTRUCTIONS
1	_	GENERAL MAINTENANCE
2	1	STANDARD CABINET AND RECLAIM PARTS
3	2	BASKET DRIVE & PARTS
4	3	BASKET
5	4	MEDIA HOSE & PARTS
6	5	MEDIA VALVE
7	6	BASKET DRIVE
8	7	AIR CONTROL
9	8	BLAST GUN
10	9	ELECTRICAL BOX
11	10	ELECTRICAL DIAGRAM
12	_	MACHINE WARRANTY

WARNING

DO NOT USE SAND. SAND WILL CAUSE SILICA DUST, WHICH IS THE CAUSE OF SILICOSIS DISEASE, A CONDITION OF MASSIVE FIBROSIS OF THE LUNGS. THIS STATEMENT INDICATES POTENTIAL PERSONNEL HAZARD. FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

> WEBSITE CONCERNING SILICOSIS: http://www.osha.gov/Silica/IT69D 1.html

LITTLE BLASTERTM

SET-UP INSTRUCTIONS

MACHINES WITH 300 CFM RECLAIM

*** READ BEFORE OPERATING EQUIPMENT ***

- 1. Remove plastic from machine.
- 2. Remove lag bolts from each of the four legs, then remove machine from the pallet.
- 3. Remove bag & clamp from machine.
- 4. Connect compressed air supply to air filter. Air piping should be of the same size as the connection point, offering no restriction to flow.

(DO NOT USE QUICK-DISCONNECTS)

5. Connect the factory installed male cord from electrical box, to a 120-Volt, 60 HZ, 1 Phase power supply. A 20 AMP breaker or fuse should be used.

MAKE SURE MACHINE IS PROPERLY GROUNDED.

OPERATING INSTRUCTIONS

1. **Preparing parts for Blasting:**

All parts to be processed must be free of oil, grease, and moisture. Make sure parts are dry before putting into basket for cleaning.

2. Air Pressure:

5 PSI to 80 PSI. Set air pressure at 80 PSIG. Most parts for blasting cleaning cabinet should be blasted at 80 psi. Designate parts to be processed, start at lower pressure and work up the PSI scale to obtain desired finish.

WARNING

DO NOT CONNECT TO HIGH PRESSURE BOTTLE GAS, RUPTURE AND EXPLOSION CAN OCCUR.


GENERAL MAINTENANCE


1. Blasting Gun:


After 10 - 12 hours of blasting time the air orifice and nozzle should be checked. If the nozzle shows wear, rotate 1/4 turn to prevent uneven wear. If this is not checked, it could result in destruction of nozzle and damage to the gun housing. If wear is detected on the orifice tip, replace.


2. Caking of Media:


Media caking is caused by moisture in compressed air supply or oily and greasy parts. If this is not corrected, media will not flow and will clog gun. Check air supply. If water or moisture is present, install a good moisture trap. If oily or greasy parts are being blast treated, you should first degrease and dry parts.

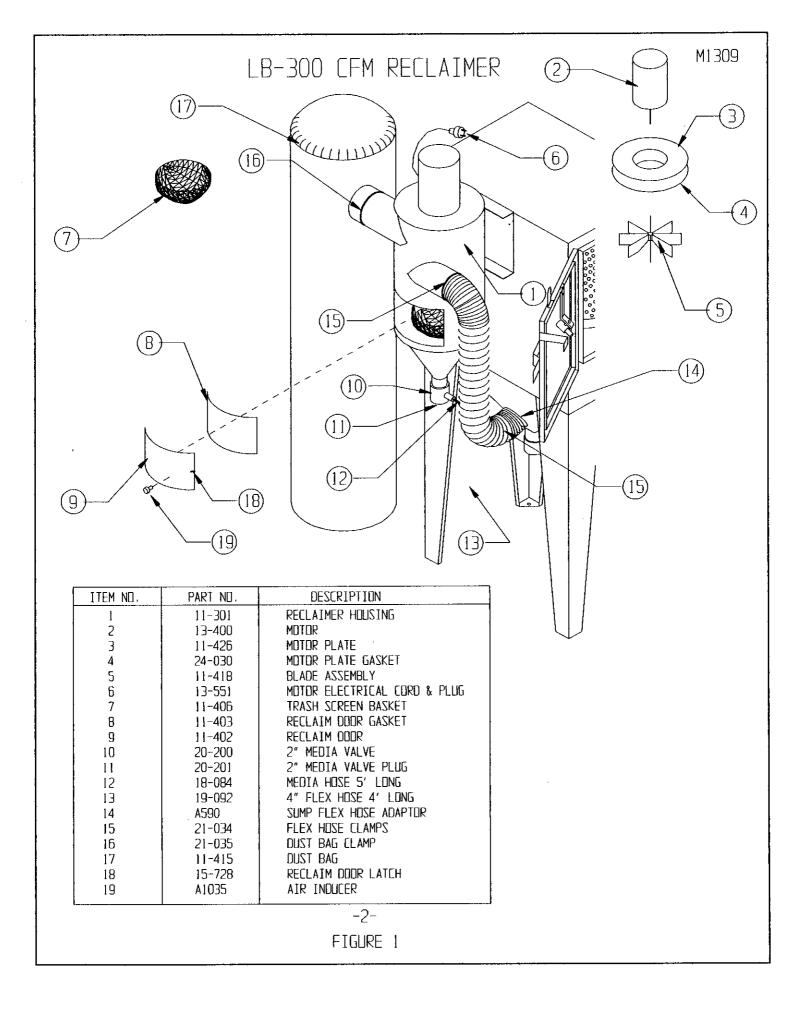

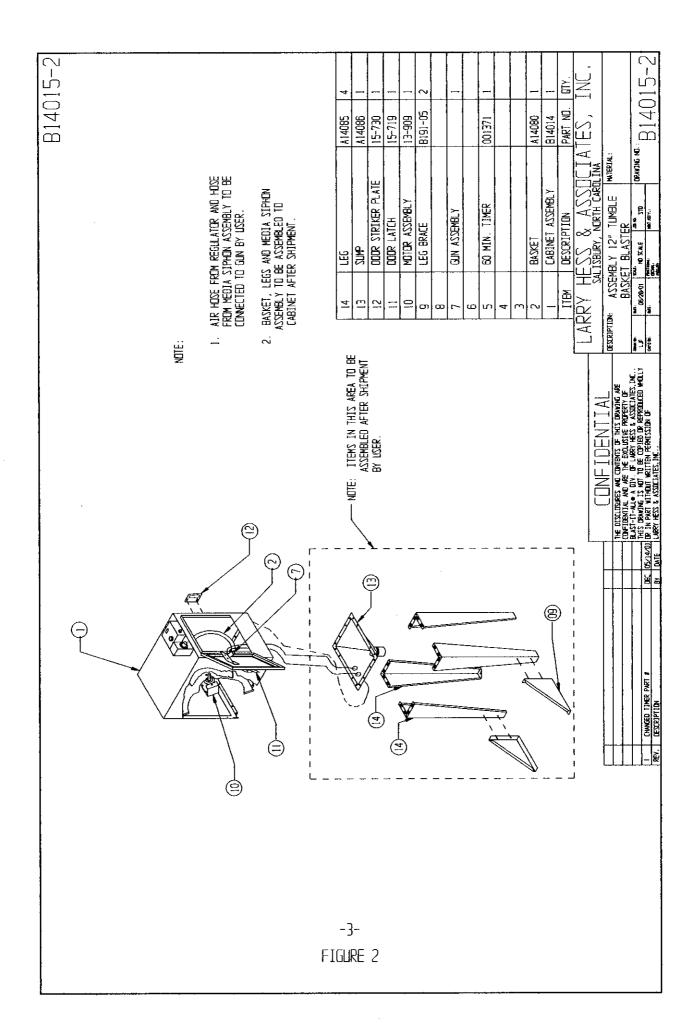

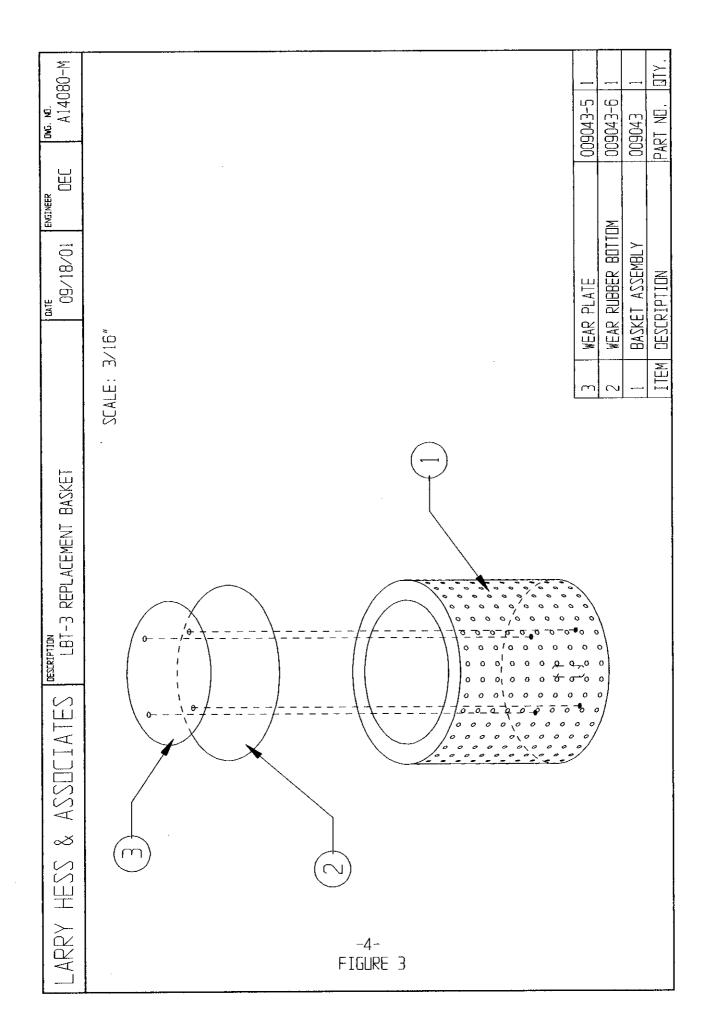

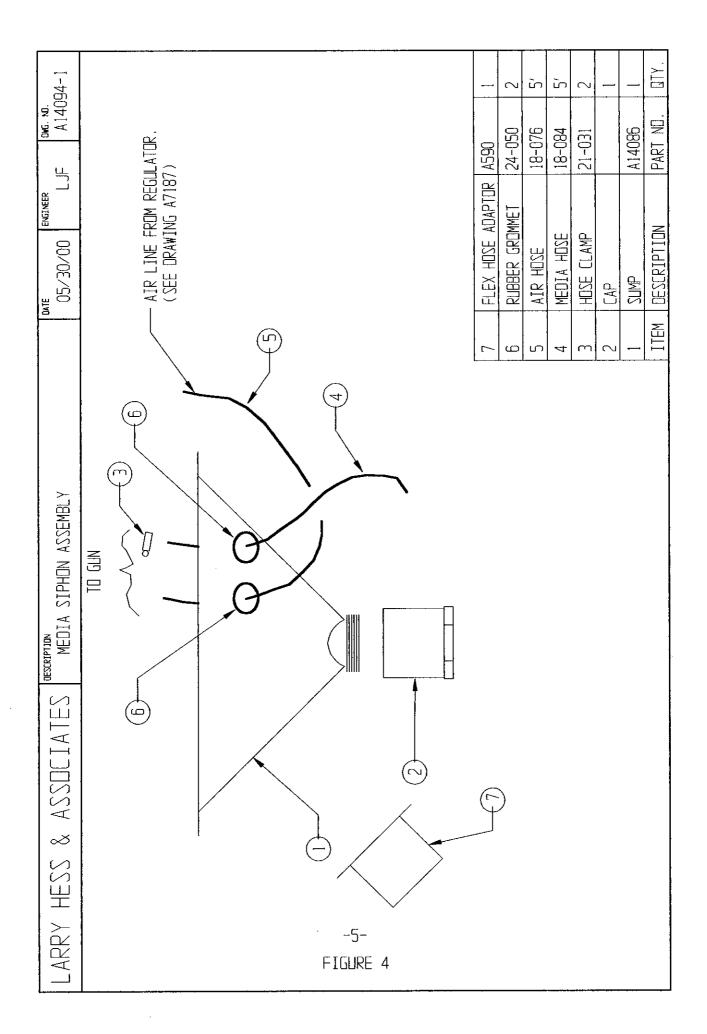


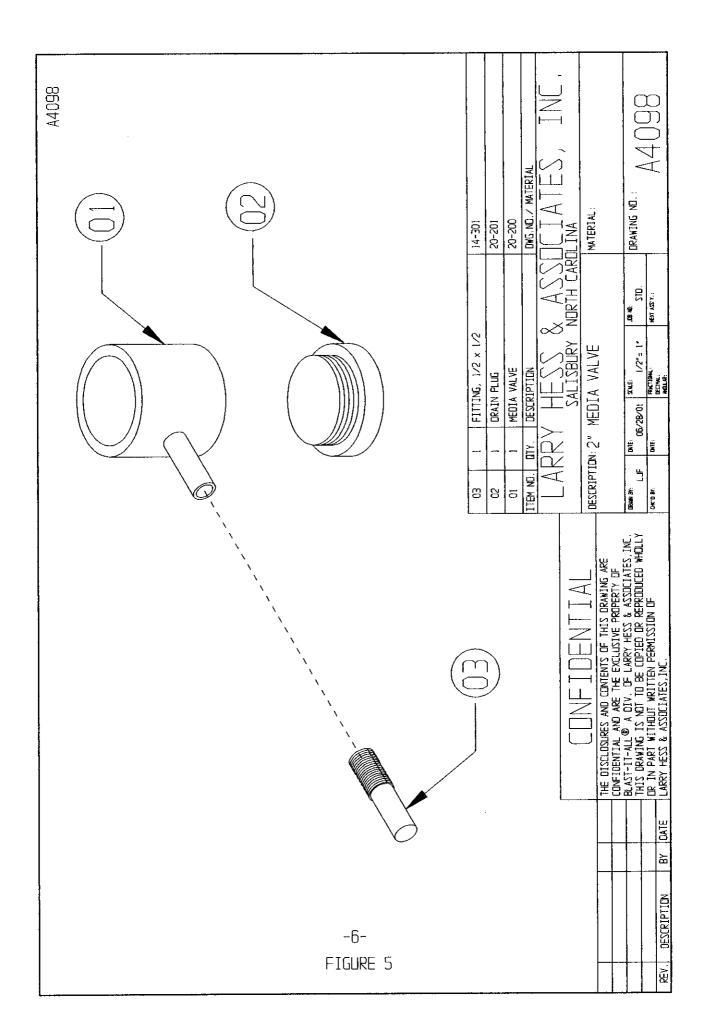



DATE ENGINEER DNG. NO. 1/6/93 KAS A14093	AB** REV: 01/20/95 BY DEC REV: 07/16/96 BY DEC REV: 09/23/96 BY DEC REV: 10/13/99 BY DEC REV: 10/13/96 BY DEC REV: 10/13/96 BY DEC REV: 10/13/99 BY DEC REV: 10/13/99 BY DEC REV: 10/13/99 BY DEC BILT I/4* LDCK NUT 30-503 4 BIL 1/4* LDCK NUT 30-503 4 BIL 1/4* LCK NUT 30-503 4 BIL 1/4* SHERT A14091 1 1/4-28 ALLEN HEX HEX 2 BEARING 1/4-28 ALLEN 1-1/2* 2 SHAFT A14091 1 1 1/4* SHAFT A14091 1 1 1/4* M DESCRIPTION PART 13-900 1	
LARRY HESS & ASSICIATES DESCRIPTION ASSEMBLY		

A7187	D105-13	14-301	16-965LR	18-076 × 5' LONG	13-514	16-365	16-819	002301	14-378		DVG.ND. / MATERIAL	- JNL		87
	Dia		16-	18-	13-	16-				16		$\overline{\langle}$		A7187
	ET	1/2 × 1/2 BARB FITTING	RING	Ø 1/2" AIR HOSE	1/2" SOLENDID	1/2* Regulator	GUAGE, 1/4"	1/4" STREET ELBOW	1/2* CLOSE NIPPLE	FILTER 1/2"			MATERIAL:	DRAWING ND.:
	BRACKET	112 ×	LDCK RING	Ø 1/2	1/2"	1/2*	GUAGE	1/4*	1/2"			S S C C AROL I	Ψ	
	-	-		1		-	t 1	-	3		TTEM ND. DTV	X North		.08 MD: MEXT ASS'Y
	01	8	8	60	99	50	50	B	62	0		TESSBURY	SULS	X.M.E: N. T. S. Rectimue: uccomae: mollar:
AIR														SKAE:
												LARRY	DECSRIPTION: LBT-3 AIR CI	L IF DATE:
	((\mathbf{S})	1]		DOWN BY:
					E	シ							L S ARE	BLAST-IT-ALL® A DIV. OF LARRY HESS & ASSOCIATES, INC. THIS DRAWING IS NOT TO BE COPIED OR REPRODUCED WHOLLY OR IN PART WITHOUT WRITTEN PERMISSION OF LARRY HESS & ASSOCIATES, INC
													V L A THIS DRAWIN VE PROPERTY	or Reprod Dr Reprod Ston Df
														F LARRY HE Be Copied Ten Permis (, inc.
					NLU VI								ES AND CDN AND ARE TH	© A DIV. D IS NDT TD THOUT ¥RIT ASSDCIATES
	/	1		(}	, ,									ST-IT-ALL C S DRAWING IN PART WI RY HESS &
)													06/27/01 DR DATE LAR
$\left \begin{array}{c} \langle 0 \rangle \\ \langle 0 \rangle \end{array} \right $)													BY DA
	}	3-												ADD 3 ITEMS DESCRIPTION
F	IGL		7											
														- 2


DWG. ND. AQAA3	<u> </u>	EEU-UC		20-054	20-087	20-086	20-085	20-084	20-037	20-036	20-035	20-034	20-02		PART ND.
					-				-						10
DATE 17/21/20 KAN	REV	IV EX	SEAL SEAL SEAL	U KING SEAL NDZZLE NLT HOLDING	NDZZLE CARBIDE 7/16	NDZZLE CARBIDE 6/16	NDZZLE CARBIDE 5/16	NDZZLE CARBIDE 4/16	DRIFICE 7/32	DRIFICE 6/32	DRIFICE 5/32	DRIFICE 4/32	FITTING ORIFICE HOLDING	GLIN HOUSING (RIGHT MOUNT)	DESCRIPTION
		F	- 0	പ്പ	4	4	4	4	m	m	m	m	2		ITEM
DRY HESS & ASSERTATES DEPUNICATION		-9-					*STO.				*SID.	1			
Y97A		FIGURE 8													

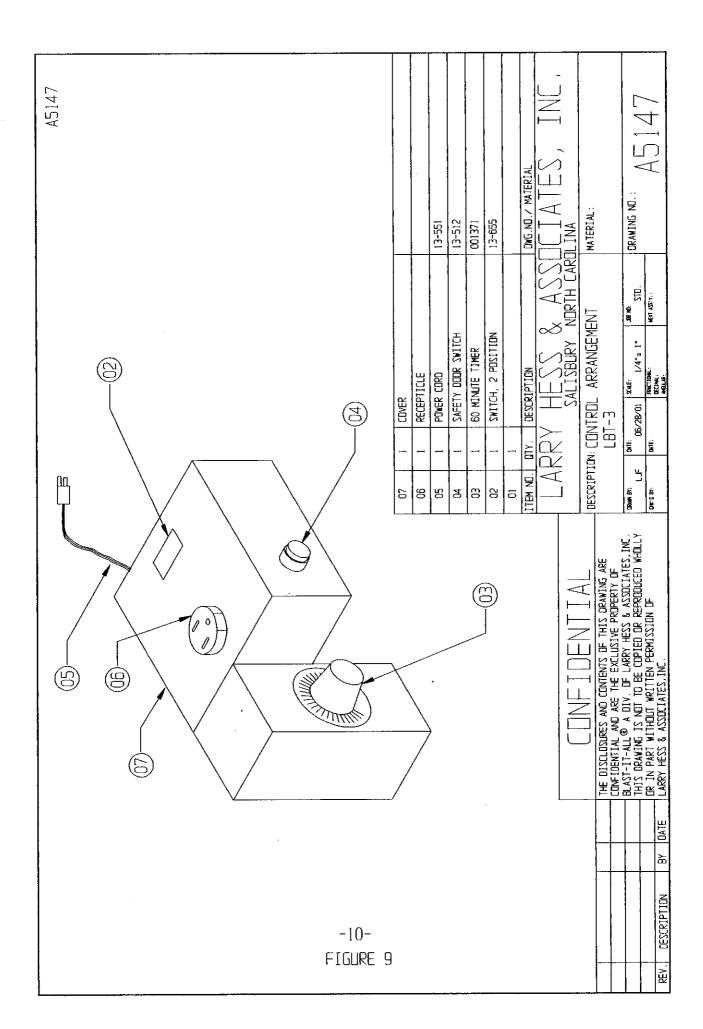

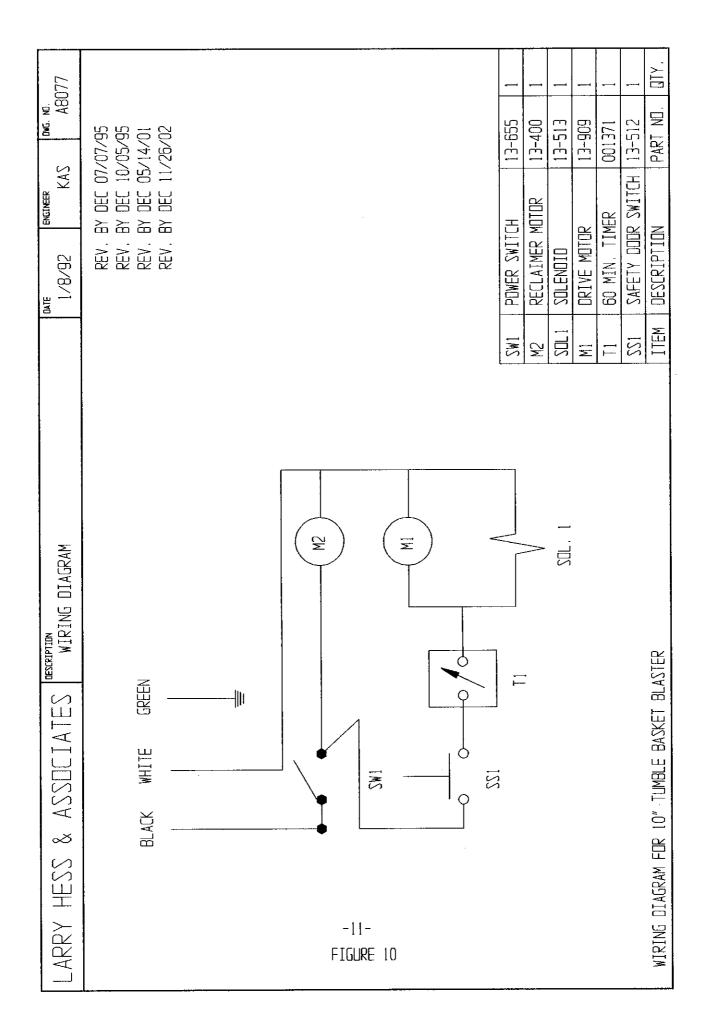

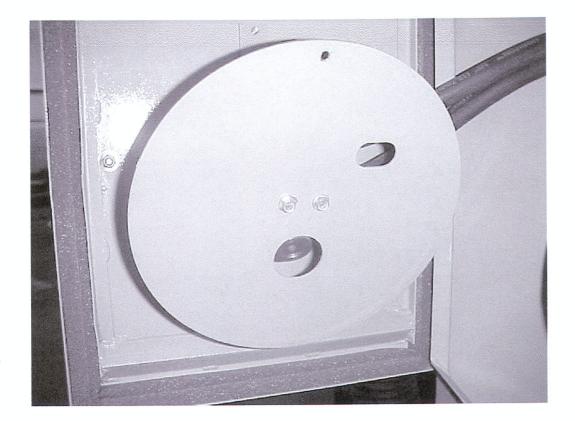

COVER PN# 009042

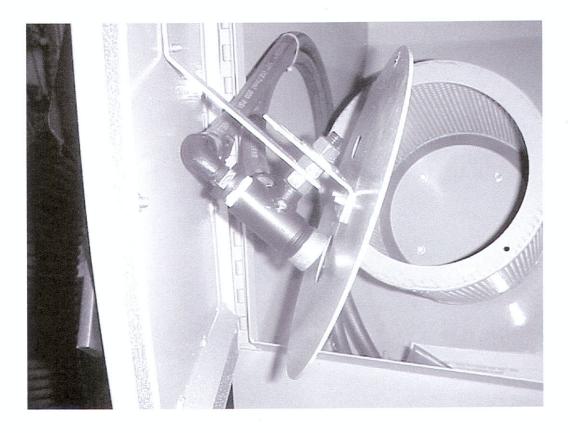

WARRANTY

Larry Hess & Associates, Inc. Warrants to the original purchaser the merchandise sold to be free from defects in material and workmanship under normal use and service for a period of one (1) year. Upon prompt notification by the buyer, to LHA, components that are determined by LHA to be defective will be repaired or replaced at no additional charge, F.O.B. our factory.

Manufacturer shall have the right to inspect prior to replacing all merchandise in question.

This warranty does not apply to parts that are directly involved in the blasting operation. Example: gun, gun parts, viewing window, hose, gloves, etc.

Manufacturer shall not be required to pay any removal or installation charges whatsoever under this warranty.

Manufacturer shall not be liable for prospective profits, special or consequential damages, nor shall any recovery of any kind against manufacturer be greater in amount than the cost of repairs of defects in workmanship.

This warranty does not apply to damage caused by accidents, damage in transit, alterations by unauthorized personnel, abuse or damage by flood, fire, or acts of God, nor by artificially generated electric currents or any other cause whatsoever except defects in material or factory workmanship.

In all cases, defective parts must be returned to Larry Hess & Associates, Inc. before credit is issued.

If genuine BLAST-IT-ALL® replacement parts are not used, the warranty is void.

This warranty is in lieu of all other warranties expressed or implied and releases Larry Hess & Associates, Inc. of all other obligations and liabilities whatsoever. This warranty neither assumes nor authorizes any person to assume any obligation other than those specified by this warranty.

WARNING

DO NOT USE **SAND**. SAND WILL CAUSE SILICA DUST, WHICH IS THE CAUSE OF SILICOSIS DISEASE, A CONDITION OF MASSIVE FIBROSIS OF THE LUNGS. **THIS STATEMENT INDICATES POTENTIAL PERSONNEL HAZARD. FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.** BLAST-IT-ALL® Larry Hess & Associates, Inc.

Larry Hess & Associates, In Airport Industrial Park 185 Piper Lane P.O. Box 1615 Salisbury, NC 28145-1615